


ComAnt LP Installation instructions

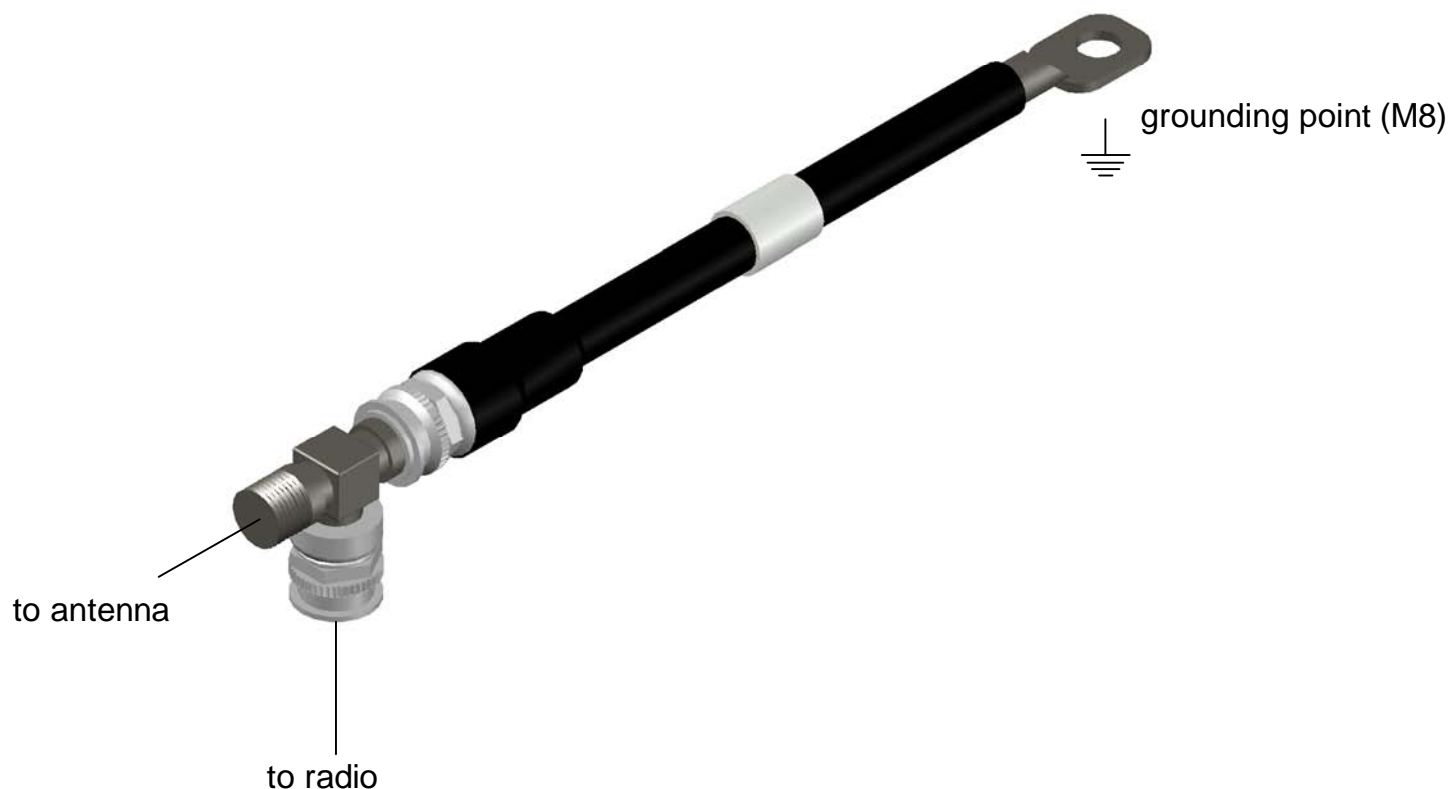

The preferred location for lightning protector is outside of protected zone

The lightning protector can be inserted to feedline in both directions

Grounding to central grounding bar or equivalent

Grounding cables of minimum 16 mm²

Grounding point is mounted by properly tightened M8 bolt

The contact surfaces at the grounding point shall be clean and dry

LP-N(N-female - N-male) is IP67

LP-TNC (TNC-female - TNC-male) is IP62

For proper weather protection all connectors and cable junctions should be covered by self-amalgamating tape or equivalent